## **USB Country Keyboard Types (Country Codes)**

Scan the bar code corresponding to the keyboard type. This setting applies only to the USB HID Keyboard device.



**NOTE** When changing Country Selection, the scanner automatically restarts and issues the standard startup beep sequences.





**French Windows**